
Topcase rack

SUZUKI DL 650 V Strom XT

ID:2984768





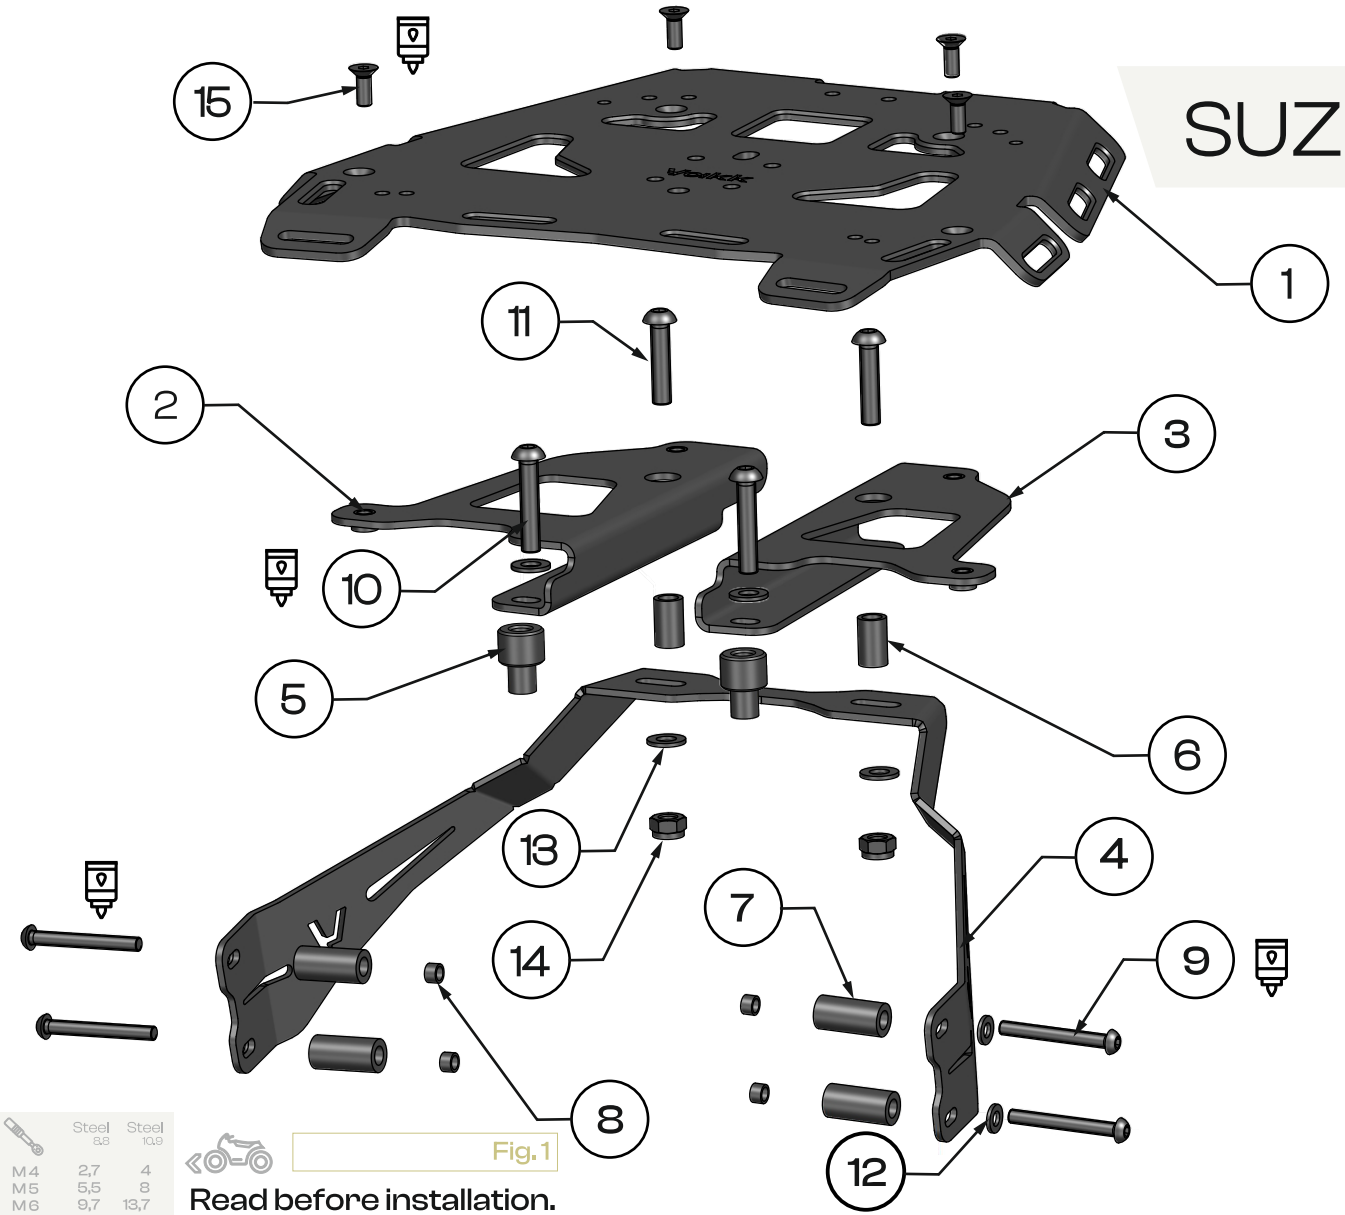


	Steel 8.8	Steel 10.9
M4	2,7	4
M5	5,5	8
M6	9,7	13,7
M8	23	33
M10	47	66
M12	80	116
M14	130	184
M16	196	287
M18	270	395
M20	385	560

Fig.1

Read before installation.
All bolts have to be finaly tighten after installation all parts on vehicle.
When installing the Side Luggage Rack together with the product Topcase Rack Yakk exp: ID 2984767, replace the spacer sleeve (7) with the shorter spacer.

one person | use a medium-stregth | tighten with torque | OEM Original Equipment Manufacturer

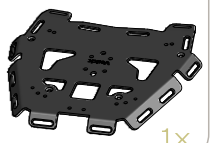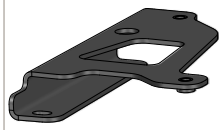1 Universal top case plate  1x	2 Right bracket  1x	3 Left bracket  1x
4 Main frame bracket  1x	5 Spacer sleeve  D20x12xd9xH28 2x	6 Spacer sleeve  D12xd8.4xH20 2x
7 Spacer sleeve  D14xd8xH29 4x	8 Spacer sleeve  D8xd6xH5 4x	9 Bolt  M6x50 -DIN 7380 4x
10 Bolt  M8x40 -DIN 7380 2x	11 Bolt  M8x35 -DIN 7380 2x	12 Washer  M6-DIN 125 4x
13 Washer  M8-DIN 125 4x	14 Nut  M8-DIN 985 2x	15 Bolt  M6x16-DIN 7991 4x

Yakk EXP

assembly instructions

yakkexp.com

EXPLORE POSSIBILITIES

Read before installation.

All bolts have to be finaly tighten after install ation all parts on vehicle.

follow yakkexp join #yakkherd

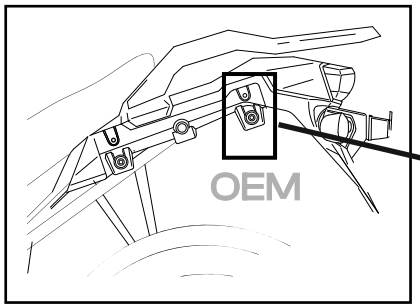


Fig. 2

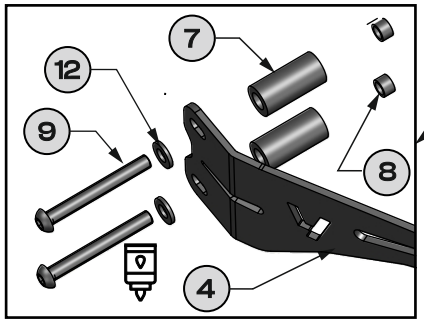


Fig. 3

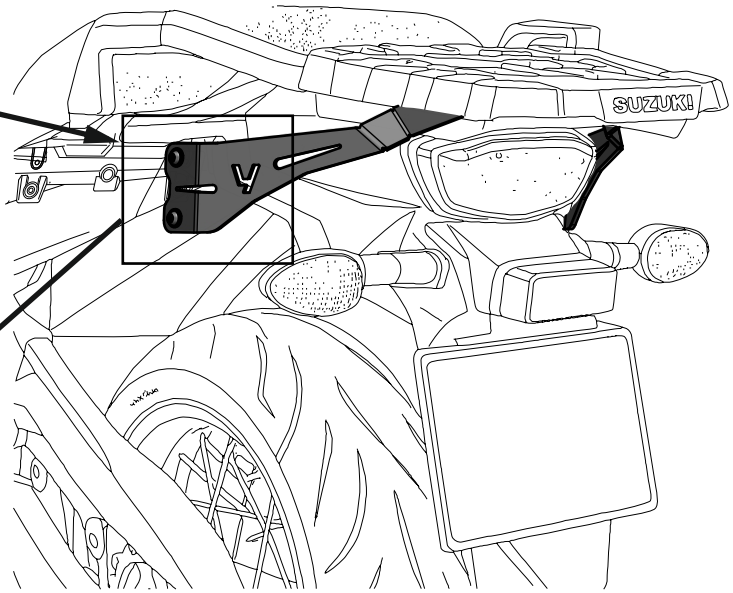


Fig. 4

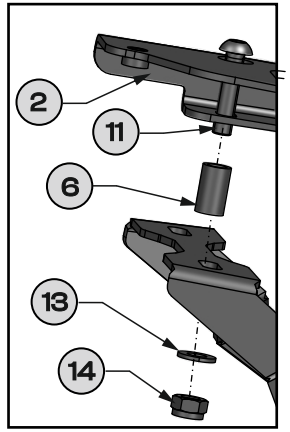


Fig. 6

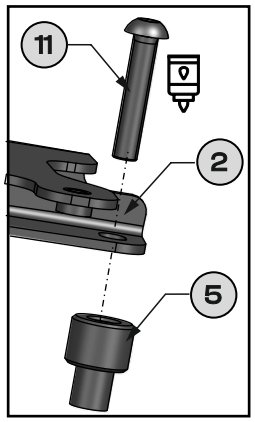


Fig. 7

Unscrew the bolt as OEM marked in **[Fig. 2]** using the appropriate wrenches from the tool set. Fasten Main frame bracket **[4]** to the motorcycle frame through spacer sleeves **[8]** inserted into the small holes, and **[7]** spacer sleeves], using bolt **[9]** M6×50 - DIN 7380 with washer **[12]** - M6 DIN 125. **[Fig. 2]** Apply medium-strength threadlocker. Repeat the procedure on the other side of the motorcycle. **[Fig.3], [Fig.4]**

Mount **[2]** right bracket and **[3]** left bracket to the motorcycle. First attach to **[4]** main frame bracket using bolt **[11]** M8×35- DIN 7380 through spacer sleeve **[6]** and washer **[13]** - M8 DIN 125 , securing it with nut **[14]** M8 - DIN 985. **[Fig. 5] , [Fig. 6].** Next, fasten **[2]** and **[3]** with the second bolt **[11]** M8×35 - DIN 7380 through spacer sleeve **[5]** to the motorcycle. Then apply medium-strength threadlocker. **[Fig.5]**, **[Fig.7]**

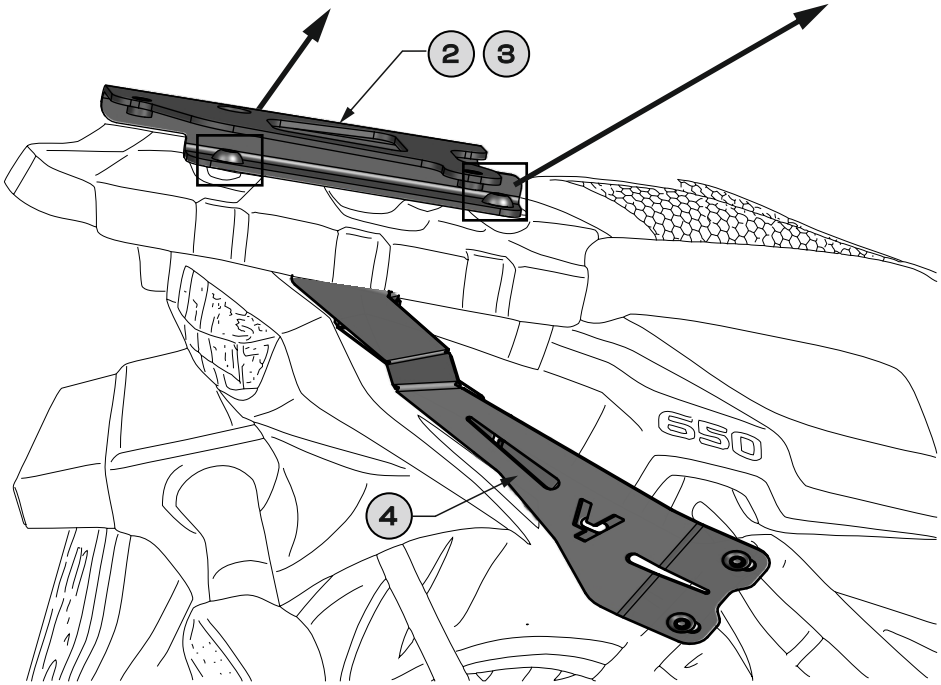


Fig. 5

one person | use a medium-stregth | tighten with torque | **OEM** Original Equipment Manufacturer

Yakk EXP

assembly instructions

yakkexp.com

EXPLORE POSSIBILITIES

Read before installation.
All bolts have to be finaly tighten after install ation all parts on vehicle.

Mount **[1]** top case plate to the brackets **[2]** and **[3]** using bolts **[15]** M6×16 – DIN 7991. Apply medium-strength threadlocker.Then check and tighten all bolts and components on the motorcycle securely. **[Fig. 8]**, **[Fig. 9]**. Apply medium-strength threadlocker.

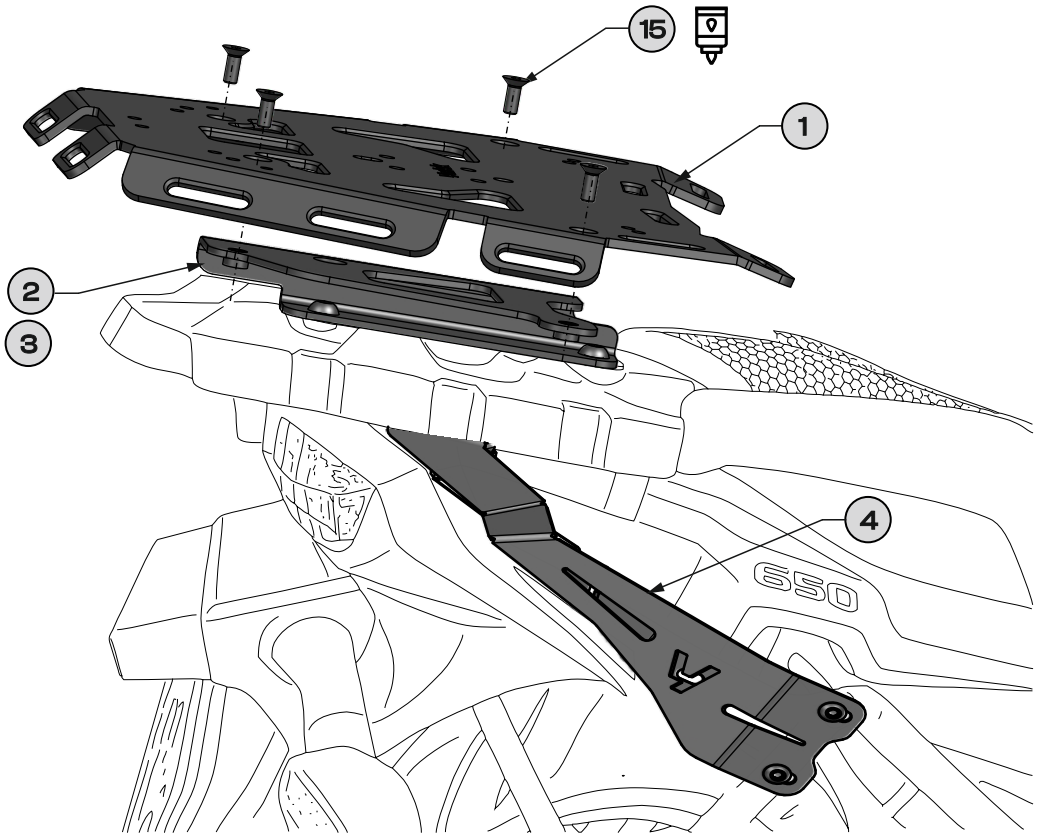


Fig. 8

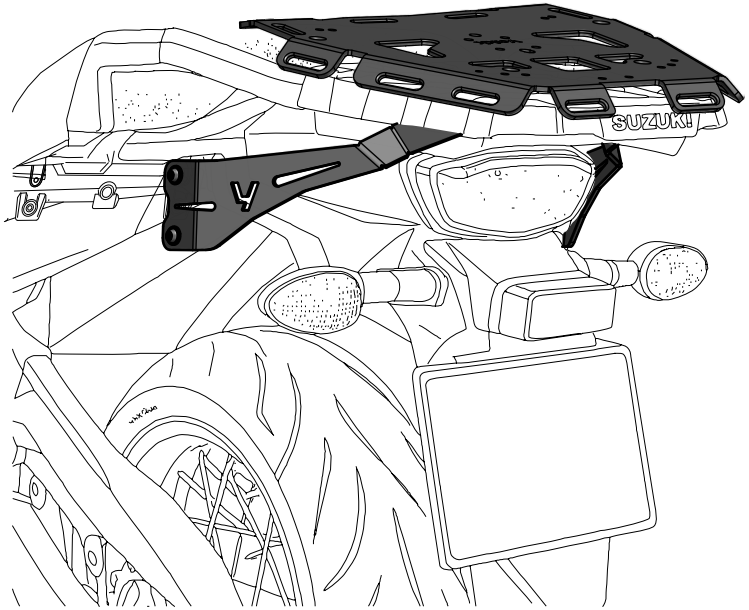


Fig. 9

Finally, make sure all component bolts are securely tightened to the appropriate torque. [Fig. 9].

one person | use a medium-stregth | tighten with torque | OEM Original Equipment Manufacturer