Skid plate black

Honda CRF 300 Rally

ID:3016216

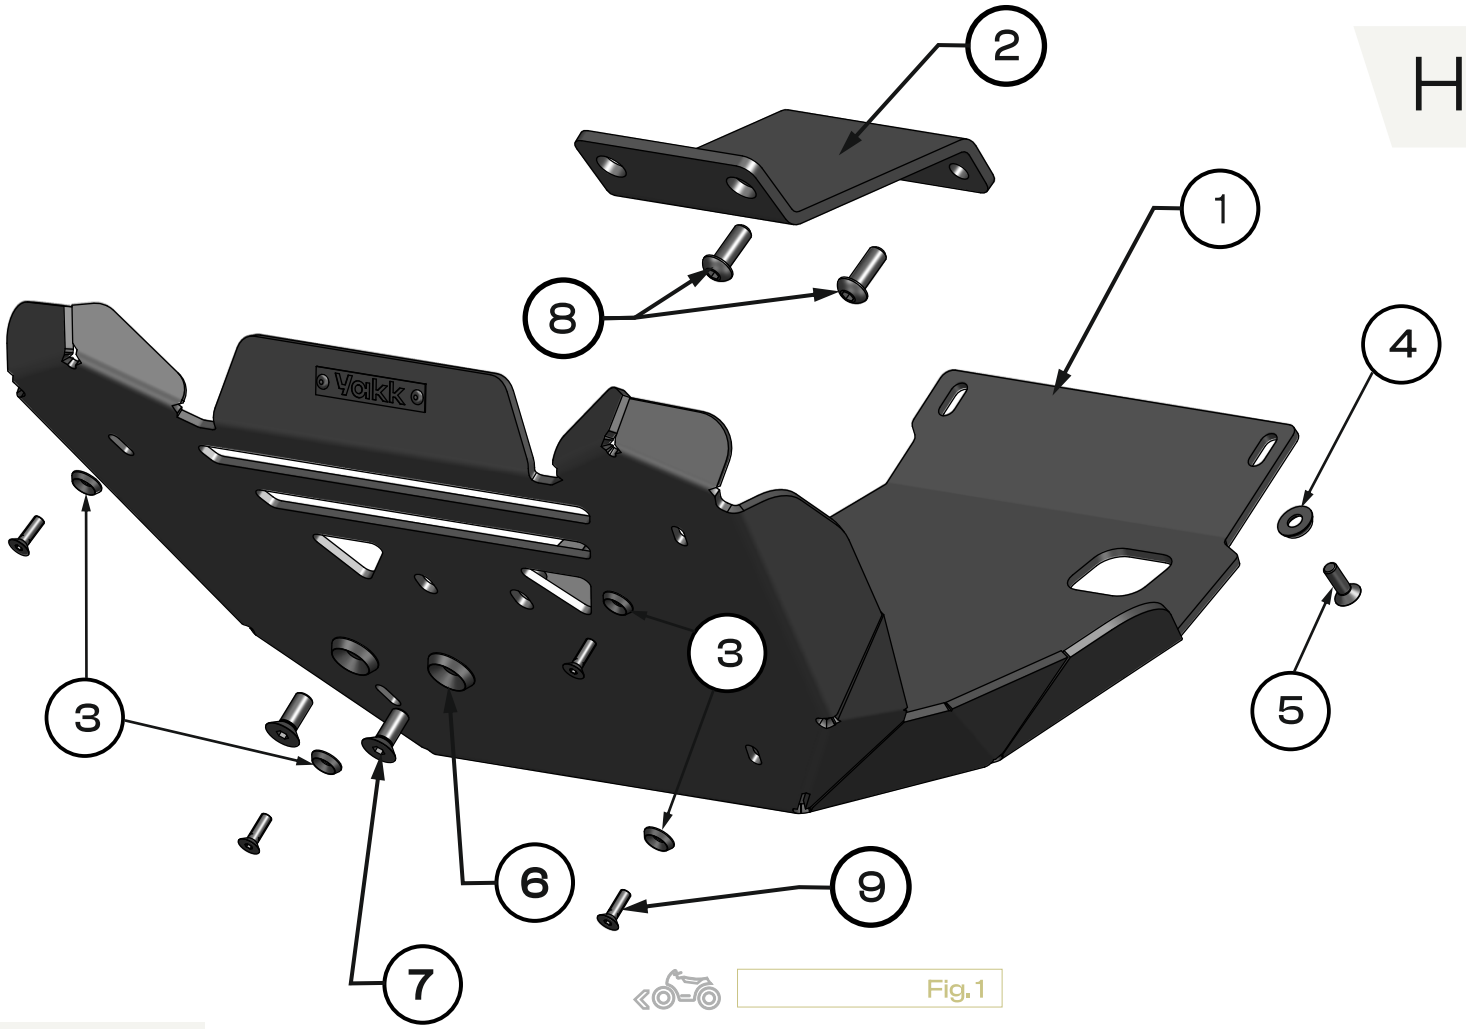




Fig. 1

	Steel 8.8	Steel 10.9
M4	2,7	4
M5	5,5	8
M6	9,7	13,7
M8	23	33
M10	47	66
M12	80	116
M14	130	184
M16	196	287
M18	270	395
M20	385	560

1 Engine guard  1×	2 Central bracket  1×	3 Washer  M5-DIN 9081 4×	
4 Washer  M6-DIN 9081 2×	5 Bolt  M6x18 -DIN 7991 2×	6 Washer  M8-DIN 9081 2×	
7 Bolt  M8x20 -DIN 7991 2×	8 Bolt  M6x16-DIN 7380 2×	9 Bolt  M5x16 -DIN 7991 4×	

Read before installation.

Before installing the Yakk exp Skid plate remove the original engine cover.

All bolts have to be finaly tighten after installation all parts on vehicle.

one person | use a medium-stregth | tighten with torque | OEM Original Equipment Manufacturer

Yakk EXP

assembly instructions

yakkexp.com

EXPLORE POSSIBILITIES

Read before installation.

All bolts have to be finaly tighten after install ation all parts on vehicle.

follow yakkexp join #yakkherd

Remove the original engine guard using the appropriate wrenches from the tool set.. Install the central bracket **[2]** using bolts **[8]** M6x16 DIN 7380 **[Fig. 2]**, **[Fig. 3]**. Attach **[1]** using bolt **[7]** M8x20 DIN 7991 and washer **[6]** to bracket **[2]**. Secure bolts **[9]** M5X15 DIN 7991 with washers **[3]** to the original **OEM** mounting points. **[Fig. 2], [Fig. 4], [Fig. 6]**. Then fasten bolt **[5]** M6X168 DIN7991 with washer **[4]** to the mounting point on the motorcycle.**[Fig. 5],[Fig. 6].** Use medium-strength threadlocker on bolts to prevent loosening due to vibration.

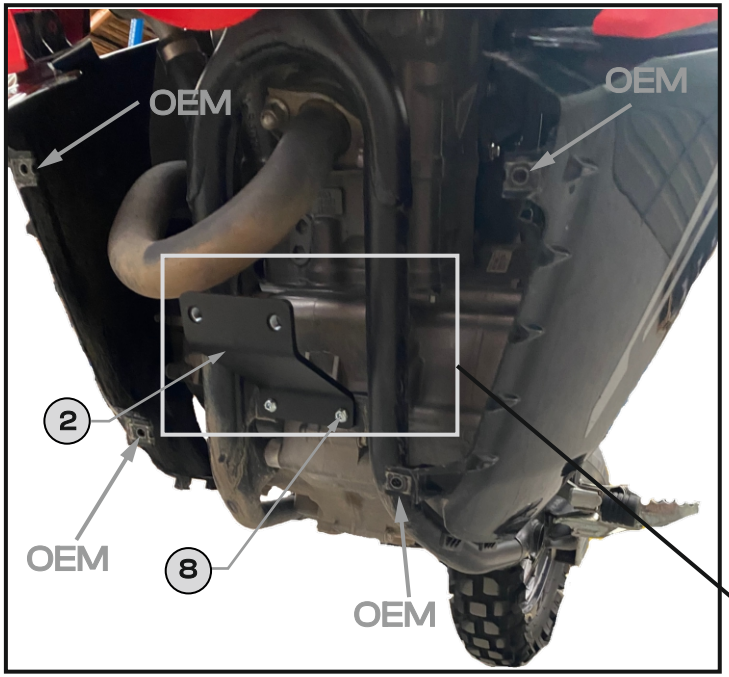


Fig. 2

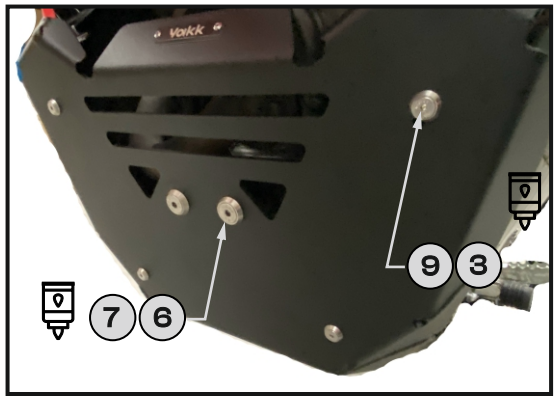


Fig. 4

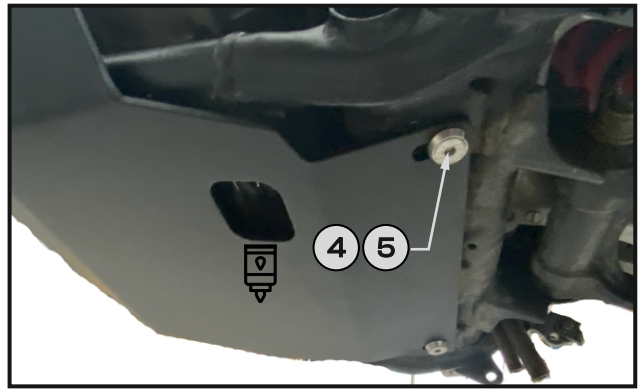


Fig. 5

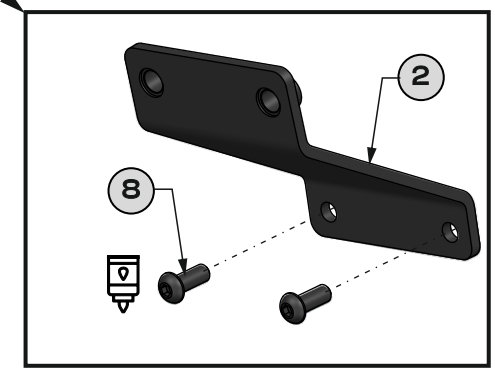


Fig. 3

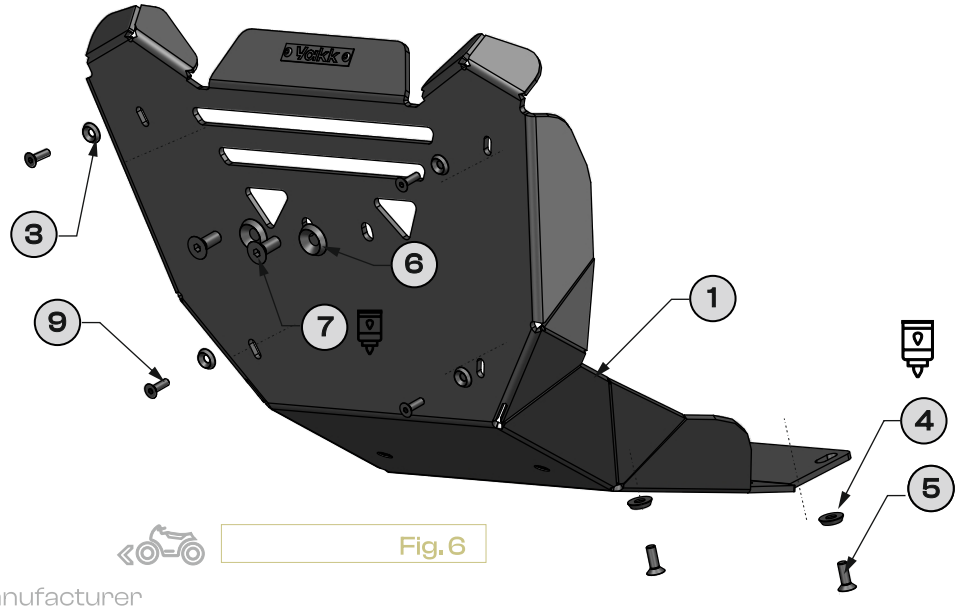


Fig. 6

one person — use a medium-stregth — tighten with torque — **OEM** Original Equipment Manufacturer

assembly instructions

yakkexp.com

EXPLORE POSSIBILITIES