Headlight guard

Honda XL 750 Transalp

ID:3083207

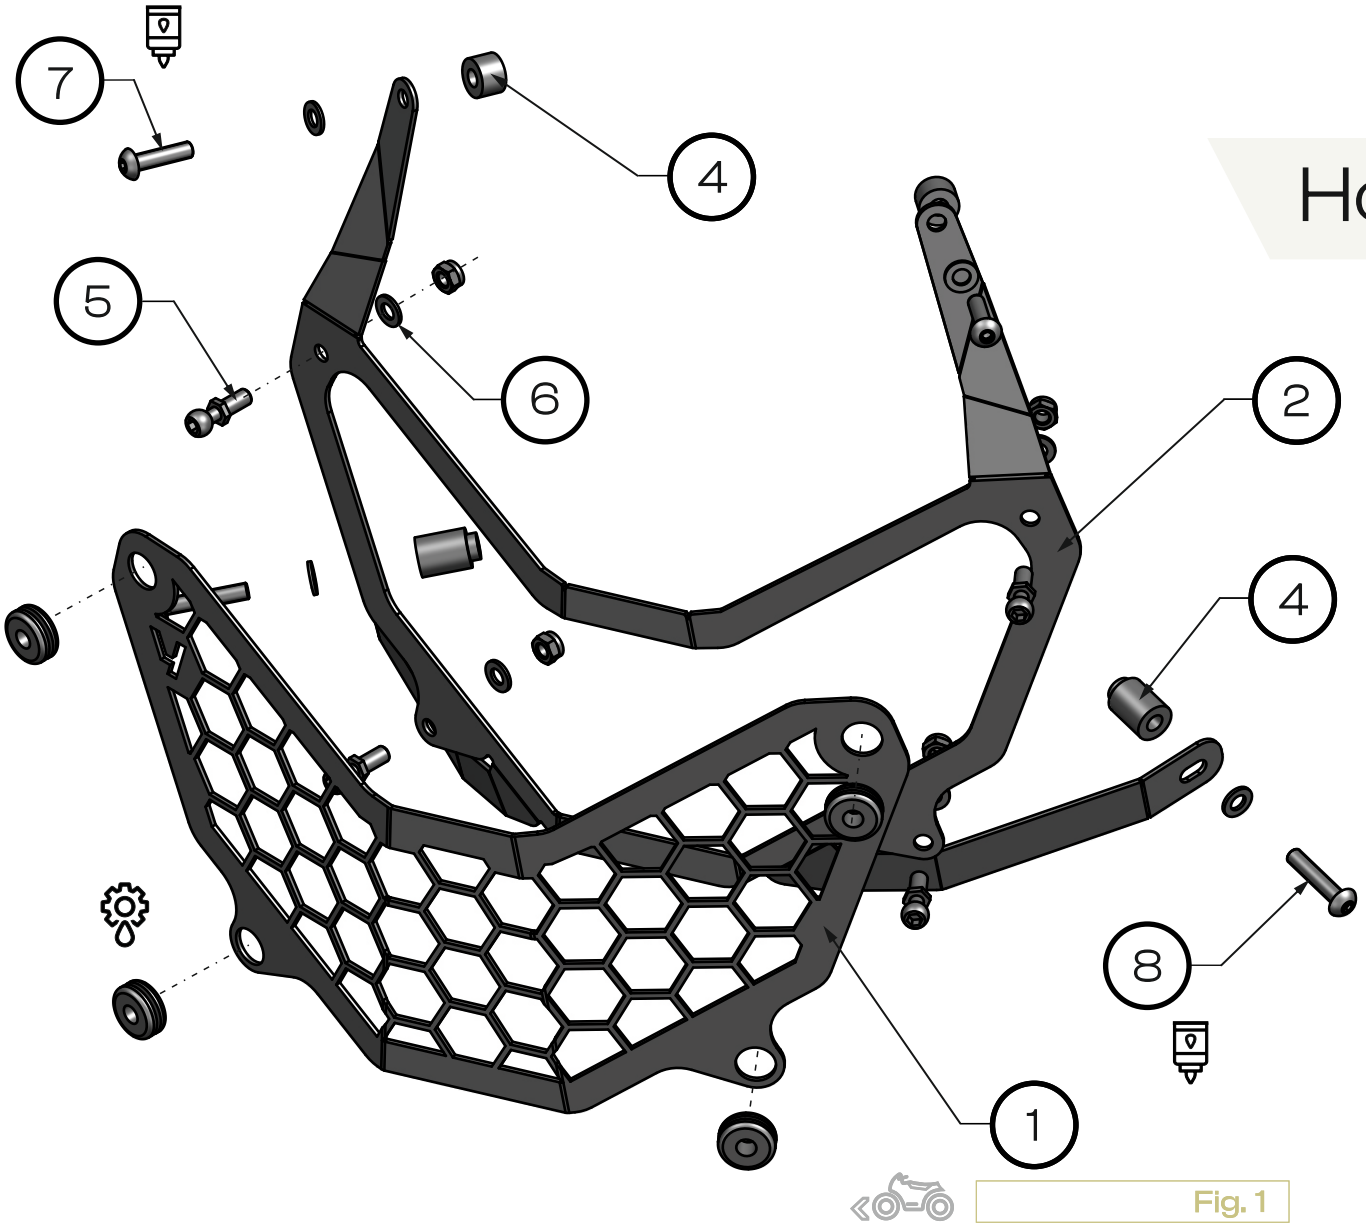
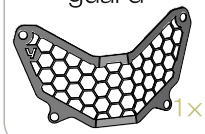


Fig. 1

1 Headlight guard  1×	2 Frame  1×	
3 Spacer  d5.5xD12xh8 2×	4 Spacer  d5.5xD12xh18 2×	
5 Bolt  4×	6 Washer  M5-DIN 125 8×	7 Bolt  M5x20-DIN 7380 2×
8 Bolt  M5x25-DIN 7380 2×	9 Nut  M5-DIN 985 4×	10 Grommets  4×

Read before installation.
All bolts have to be finaly tighten after installation all parts on vehicle.

one person | use a medium-stregth | tighten with torque | OEM Original Equipment Manufacturer | lublicrate

Screw **(5)** fastening the frame **(2)**, tighten through washer **(6)** with nut **(9)**. **[Fig. 2] , [Fig. 3]**

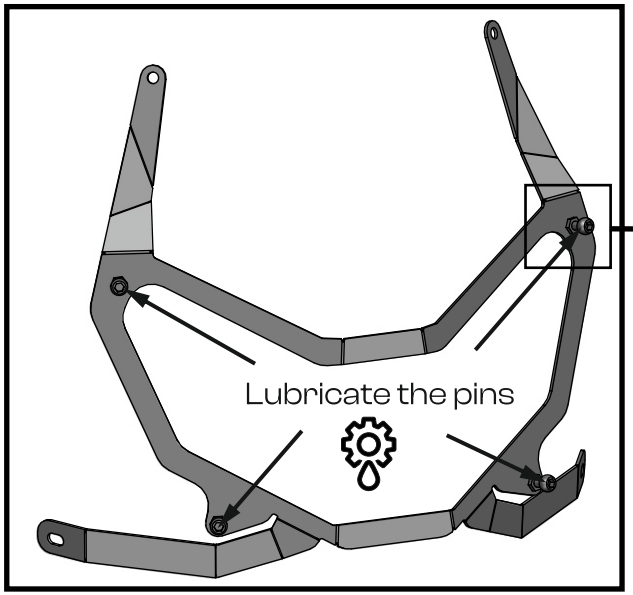


Fig. 2

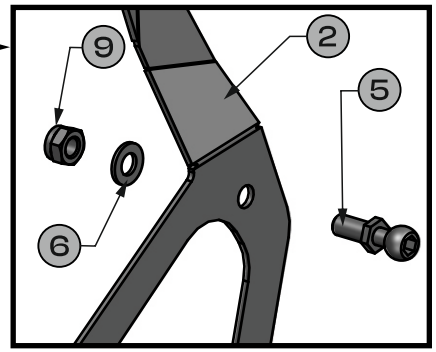
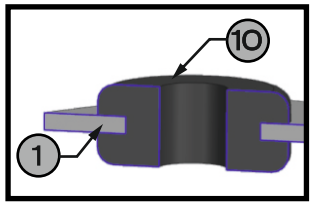


Fig. 3



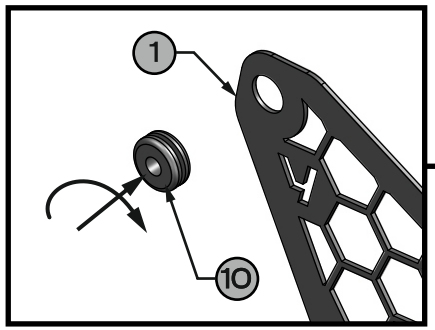


Fig. 4

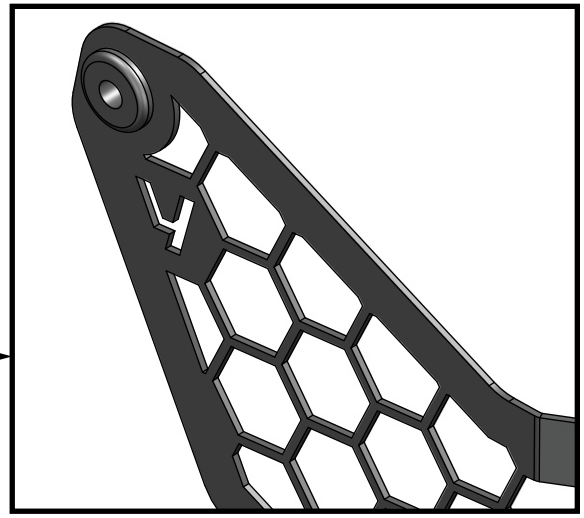


Fig. 5



Fig. 6

Remove the original bolt using the appropriate wrenches from the tool set. **[Fig. 6]**

Mount the grommets **(10)** in the holes of the headlight guard **(1)**. While pressing, apply force and twist. **[Fig. 4] ,[Fig. 5]**

Mount and fasten the frame **[2]** using bolt **[7] M5x20 DIN 7380 ,** passing through washer **[6]** and spacer sleeve **[4].** Use medium-strength threadlocker. Fasten the same way on the opposite side. **[Fig.7], [Fig.8],**

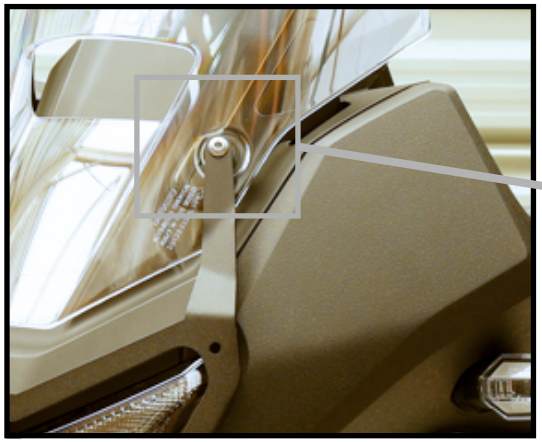


Fig.7

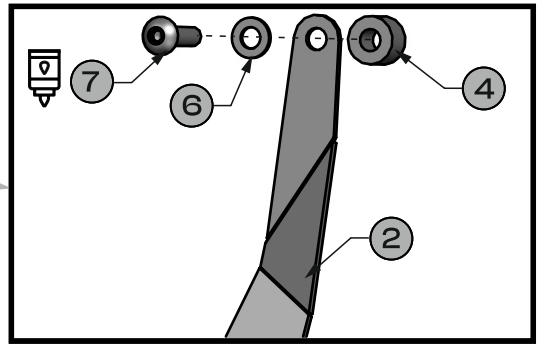


Fig.8

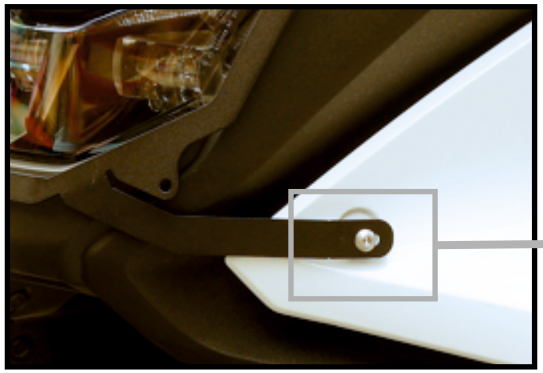


Fig.9

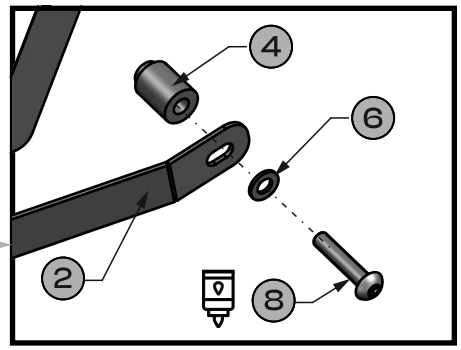


Fig. 10

Mount and fasten the frame **[2]** using bolt **[8] M5x25** DIN7380 **,** through spacer sleeve **[4].**Use medium-strength threadlocker . **[Fig.9], [Fig.10].**



Fig. 11

linstall the headlight guard **[1]** onto frame **[2]** by pressing the grommets **[10]** onto the pin bolts **[5].** Make sure the guard is securely mounted. **[Fig.11], [Fig.12].**



Fig. 12